

How to fit and operate your Pleated blind

You should have...

First check you've got all the fittings that come with your Pleated blind

Top fix brackets: min 2



 
Screws: min 4




Face fix brackets (with short screws): min 2



Wood screws: min 4



Blind: 1

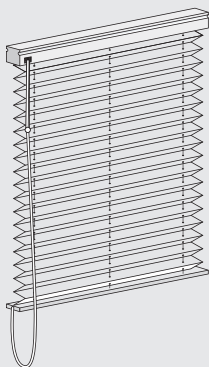

Fitting your Pleated blind

Before you start, check you have your brackets

Your blind brackets are packed separately at the end of the box. Check you've taken them out before you throw the packaging away.

Fit your Pleated blind


1 Fitting your blind outside the window (exact fitting)

To make sure the centre of the rail is precisely in the middle of your window, the measurements at either end (**C**) need to be the same. To work out **C**:

- measure the width of the window (measurement **B**). Write down the measurement.
- measure the width of the blind (measurement **A**). Write down the measurement.

Take measurement **B** away from measurement **A** and divide the answer by 2 to get measurement **C**.

Now follow the instructions for **face fixing**.

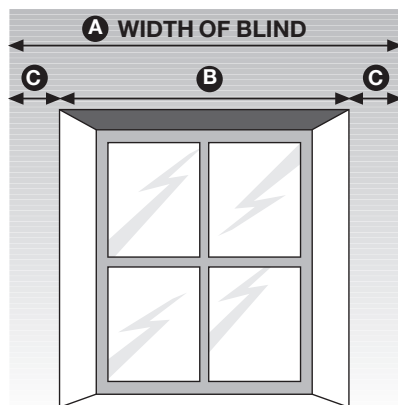

■ TOP FIX ■ FACE FIX

Fitting your blind inside the window (recess fitting)

You need to decide whether to **face fix** or **top fix** your blind.

Top fix your blind to the lintel if:


- you have uPVC window frames, or
- there are obstructions like handles

Face fix your blind if:

- you want to fit the bracket to the window frame


2 Face fixing

Lightly screw the short screws into place. Position the brackets approx 5cm from the end of the headrail. Mark holes at **A** (shown below) and screw brackets into place.

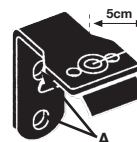


Top fixing

Measure and mark the distance any handles stick out. Then, using the blind, find and mark the fitting position **A** (shown below). Drill brackets into position 5cm away from the side walls.

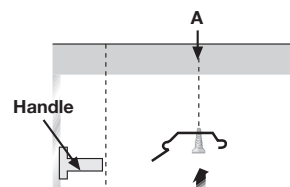


3 Face fixing

With the cord lock towards you, hook the back of the headrail into the brackets. Tighten the short screws to lock the headrail into place.

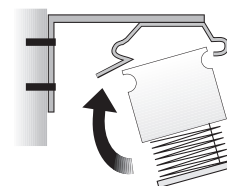

Top fixing

Tilt and hook the front of the headrail (closest to you) into the bracket. Press the back up into position until it clicks. To release the blind, push **B** (shown below).

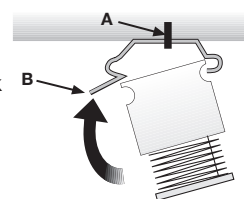


Stage 1: Fit your Pleated blind (continued)

4

The pleats should hang freely with the cord lock positioned at the front of the blind.


Cord lock

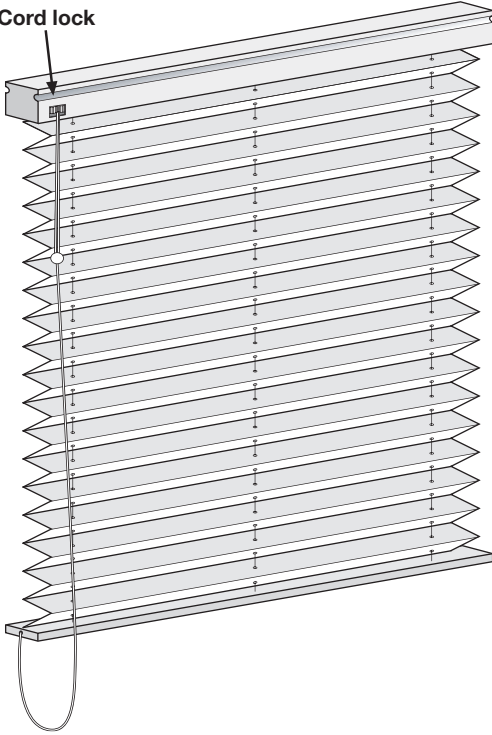

5

To raise and lower the blind, use the cord at the side.

The cord lock will hold the blind at the height you want.

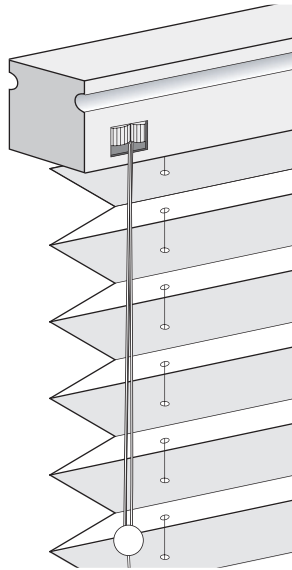

Operating your blind

Operating your blind is easy. Just follow these instructions.

- To control the height of your pleated blind, use the cord.
- To release the cord lock, pull the cord forward, then raise or lower the blind to where you want it.
- Re-lock the cord by pulling it towards the window.

Be safe

- Keep all cords and chains out of children's reach.
- Install safety devices such as cleats and cord tidies to keep cords away from children. You can request a **free safety device** when you make your MyBlinds order.
- Move cots, beds and other furniture away from blinds