



fittings

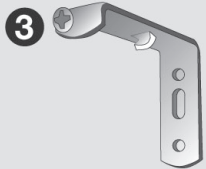

Top fix brackets:
min 2

2 Screws: min 4
Rawl plugs:
min 4



Face fix brackets
(with short screws):
min 2

(Please note face fix brackets do not come with recess blinds as standard if required please call 1890 200 800


4 Wood screws:
min 4



5 Weight




6 Stabilising chains: 2




7 Hangers:
one per louvre



8 Cord weight: 1



9 Blind: 1

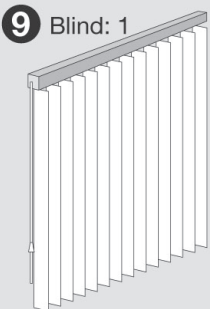


Installing the headrail

Outside Recess - Exact blind

If fitting the blind outside the window, measurements (C) will need to be the same. To work out (C), simply minus (B) from (A) and divide the answer by two. Follow instructions for FACE FIXING

Inside recess

Decide whether to FACE or TOP FIX. FACE FIX to fit the bracket to the window frame. TOP FIX to the lintel if the window frame is uPVC, or if there are any obstructions, e.g. window handles.

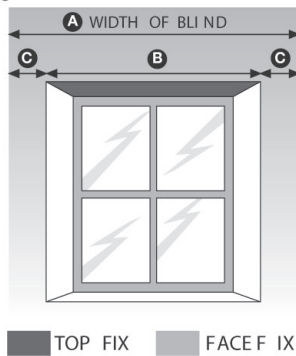


step one

Verticals Fitting Instructions


Face Fixing

Lightly screw short screws into place. Position brackets approx 5cm from the ends of the headrail. Mark holes A and screw brackets into place.

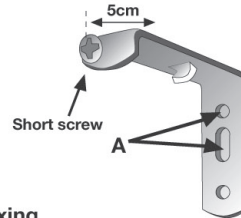

Top Fixing


Measure and mark the distance any handles protrude. Then, using the louvre hanger, find and mark the fitting position A. Drill brackets into position 5cm away from the side walls.

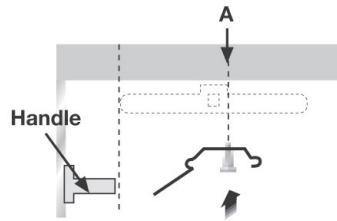

step two


Face Fixing

With carriage C closest to you, hook the back of the headrail into the brackets. Tighten the short screws to lock the headrail into place.

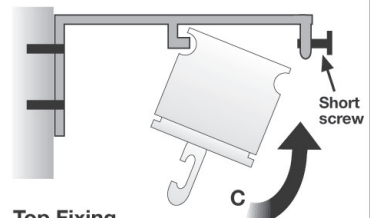

Top Fixing


Tilt and hook the front of the headrail (carriage C closest to you) into the bracket. Press the back up into position until it clicks. Push B up to release louvre.

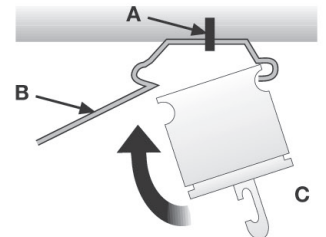

step three

Fitting the louvres

Once headrail is fitted, break open the plastic protecting the roll of louvres. Keeping the louvres in a roll, peel off one at a time and insert a hanger A in each. Ensure all hangers are positioned the same way up. Clip the hangers onto the carriage, ensuring the fabric overlaps are at the back, and that the louvres are in the open position. Turn hanger A upside-down to shorten drop of louvres if desired.

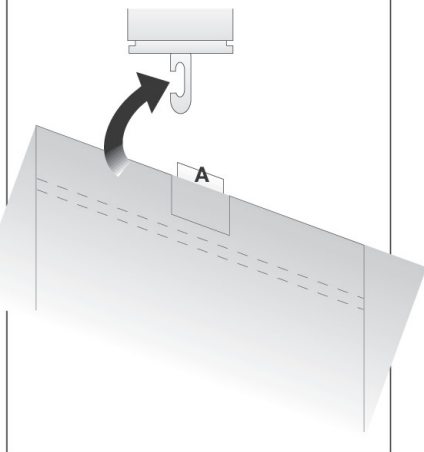


step four

Starting from one end, snap the beaded chain on to the bottom weights on both sides.

Operation

Use the cord to draw the louvres from side to side.

Use the beaded chain to rotate the louvres.

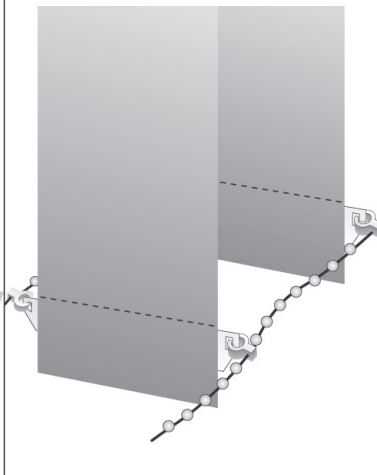

step five