

roller blinds fitting instructions

fittings

1 Brackets: 2



Idle End Bracket

2 Plastic Inserts: 1



Idle End Insert



Chain End Bracket

3 Wood Screws: 4



4 Screws: 4
Rawl Plugs: 4



5 Blind: 1



Outside Recess

If fitting the blind outside the window, measurements (C) will need to be the same. To work out (C), simply minus (B) from (A) and divide the answer by two. Follow instructions for FACE FIXING


Inside recess

Decide whether to FACE or TOP FIX. FACE FIX to fit the bracket to the window frame. TOP FIX to the intel if the window frame is upvc, or if there are any obstructions, e.g. window handles.



step one

Slide idle end insert between the teeth of the bracket until it clicks into place.

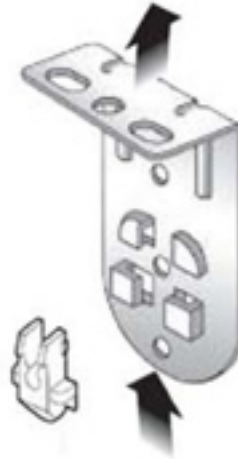

step two

Press brackets into the corresponding ends of the blind, offer the blind into the fixing position.

Now mark the position of holes for drilling.

TOP FIXING



FACE FIXING



step three

Drill the two holes per bracket where marked and screw brackets into position.

TOP FIXING



FACE FIXING



step four

Holding the fully wound-up blind in both hands

(2) Press Pin End down into Idle End Bracket


(1) Press Chain End onto Bracket



step five

Gently pull the chain to raise and lower the blind.

Chaincap this way up

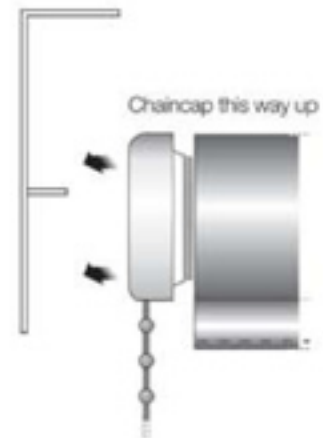

step six