


How to fit and operate your Woodweave blind


You should have...

First check you've got all the fittings that come with your Woodweave blind

Brackets: the number of these will vary depending on the length of your blind

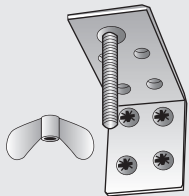

Wood screws: min 4

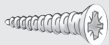


Screws: min 4

Rawl plugs: min 4



Blind: 1

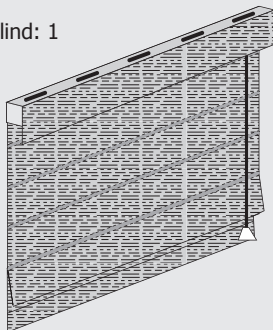

Fitting your Woodweave blind

Before you start, check you have your brackets

Your blind brackets are packed separately at the end of the box. Check you've taken them out before you throw the packaging away.

You can fit your MyBlinds Woodweave blind in 2 straightforward stages. Just do these in order and you'll soon have your new blind up.

1. Fit the headrail

2. Attach the blind

Stage 1: Fit the headrail


1 Fitting your blind outside the window (exact fitting)

To make sure the centre of the rail is precisely in the middle of your window, the measurements at either end (**C**) need to be the same. To work out **C**:

- measure the width of the window (measurement **B**). Write down the measurement.
- measure the width of the blind (measurement **A**). Write down the measurement.

Take measurement **B** away from measurement **A** and divide the answer by 2 to get measurement **C**.

Now follow step 2, then the instructions for **face fixing**.

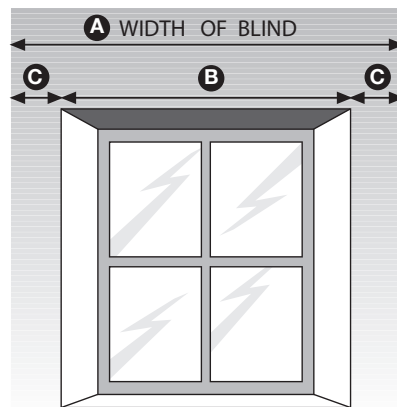

■ TOP FIX ■ FACE FIX

Fitting your blind inside the window (recess fitting)

You need to decide whether to **face fix** or **top fix** your blind.

Top fix your blind to the lintel if:

- you have uPVC window frames, or
- there are obstructions like handles

Face fix your blind if:

- you want to fit the bracket to the window frame

2 Put your blind in the fitting position. Space the brackets evenly.




— Possible bracket positioning.

3 Top fixing


Measure the distance any handles stick out from the frame (**A**). Mark the measurement on the lintel and use it to position the back of the bracket.

Choose one of the slots in the headrail nearest to the cordlock (this will hold the blind at the height you want when you raise and lower it.) and measure the distance from the end of the blind. Use this measurement to fix a bracket on the lintel and do the same thing using a slot that's a similar distance from the other end of the blind, so that your blind is evenly balanced between the 2 brackets.

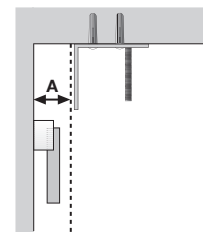

4 Face fixing


Choose one of the slots in the headrail nearest to the cordlock (this will hold the blind at the height you want when you raise and lower it) and measure the distance from the end of the blind. Use this measurement to fix a bracket on the lintel and do the same thing using a slot that's a similar distance from the other end of the blind, so that your blind is evenly balanced between the 2 brackets.

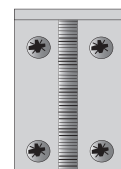

Stage 2: Attach the blind

1


Put the blind up to the brackets making sure the locating pin shows through the slots. Support the blind and attach the wing nut.

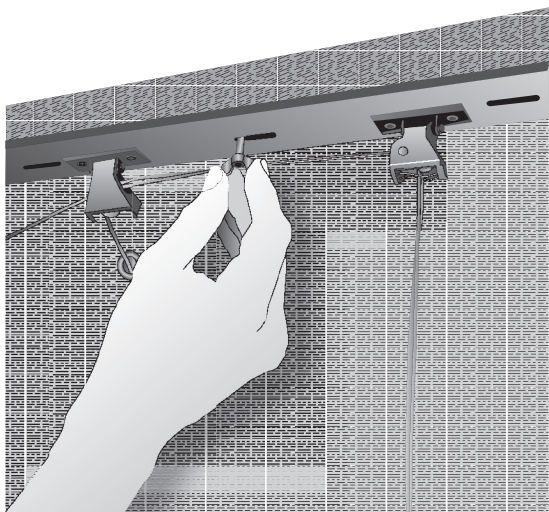

2

To raise the blind, pull the cords down until it reaches the height you want.

To lower the blind, pull the cords across the front of the blind to release the cordlock. Carefully let the cords slide through your fingers.

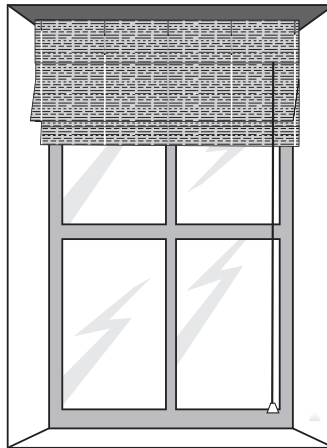

Operating your blind

Operating your blind is easy. Just follow these instructions.

- To raise your woodweave blind, pull the cords down until the blind reaches the height you want.
- To lower your blind, pull the cords across the front of the blind to release the cordlock. Carefully let the cords slide through your fingers.

Be safe

- Keep all cords and chains out of children's reach.
- Install safety devices such as cleats and cord tidies to keep cords away from children. You can request a **free safety device** when you make your MyBlinds order.
- Move cots, beds and other furniture away from blinds