

**myblinds.ie**



# Perfect Fit blinds

## Assembly

There is a simple assembly procedure to follow before installing the Perfect Fit blind.

1. Carefully unwrap the blind components and depending on the blind type, unravel all guides and control cords. The top and bottom parts of the frame will be attached together with cable.

Lay out the blind face down on a clean, even surface.



2. Select the left hand frame component and guide onto the exposed arm of the bottom left corner joint.



3. Slide the frame along the arm until secure. Repeat the process on the top left hand corner joint.

Now follow the same procedure for the right hand frame.





***myblinds.ie***



# Perfect Fit blinds

4. Once the frame is complete tighten the securing screws attached to each corner joint.



Your Perfect Fit blind is now ready to be fitted.





# Perfect Fit blinds

## Fitting the Perfect Fit frame to a window frame

### Insert window fixing brackets

1. If required, apply lubricant in the form of washing up liquid to the flat base of the window fixing bracket prior to insertion of the bracket between window and rubber seal. For the correct spacing distance of the brackets (85mm), place the measuring card into a corner of the window.
  2. Line up the window fixing bracket at the base of the card (or top of the card depending upon which corner of the window you are working) and fit the bracket by pushing it between the glass and the rubber seal on the window.
  3. Using the measuring card guarantees a perfect line up for each of the holes in your frame with each of the brackets.
- Fit any intermediate brackets accordingly. Clean excess lubricant from window surface prior to fixing frame to brackets.





# Perfect Fit blinds

4. Line up the holes in the frame with the window fixing brackets.



5. Firmly press the frame onto each bracket, one side at a time.



6. Your blind is now installed




Pleated blind



Venetian blind



Roller blind

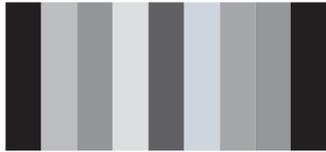

**myblinds.ie**



### Packing pieces for window handles

Blinds fitted to windows with handles may require packing pieces to be inserted between the framework and the handle.

This is to stop the handle from touching the frame when operated. There are two different lengths available.

1. Lift the handle to an upright position and remove the screw caps.



2. Unscrew the handle from the frame.




3. Place the packing piece(s) in between the handle and the frame.



4. Re-fit the handle.



# Perfect Fit blinds

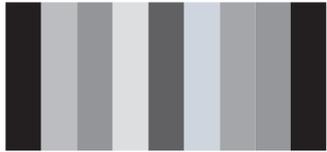

**myblinds.ie**



# Perfect Fit blinds

## Perfect Fit Removal

1. To remove the frame from the window, raise the blind to a completely open position.




2. Release the frame from each bracket by inserting a flat headed screw driver into the hole and depress against the lip of the brackets.



3. Remove one side at a time to ensure easier removal.



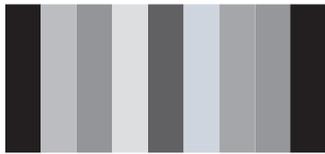

**myblinds.ie**



# Perfect Fit blinds

## Operation Guidelines

### Perfect Fit Roller blinds

To release the blind, rock the handle backwards. The blind is then free to open and close.



To lock the blind into position, rock the handle forwards.

